



MAGNETOS—MODEL GJ4

Brush & Spring
487983



487860

Brush & Spring
451260



487832



487943



490203



487464



122160



451379
463932



487944



453537



452222

CONTACT BREAKERS



470533 (Clockwise)



470534 (Anti-clockwise)



470608 (Tungsten)



470609 (Tungsten)

470599
470688

470877 (Platinum)

470878 (Platinum)

CAMS



457090



458389



452809



487532

470542 (Platinum points)

470880 (Anti-clockwise)
470881 (Clockwise)



143059



170070



487452



451055



487415

Brush & Spring
451323

460380



464277

IMPULSE STARTER 487445



487393



487443



487387/S

Spring ring
730799



Trip lever
487455



487391



185085



487390

DETAILED SPARE PARTS

Part No.	*44022A	*44022B	*44053A	*44053D	*44078A	*44078B	*44081B	*487061	*487063
Model	GJ4	GJ4	GJ4F-5	GJ4F-5	GJ4	GJ4	GJ4F-5	GJ4-5	GJ4F-5
Rotation	Anti-clock	Anti-clock	Anti-clock	Anti-clock	Clock	Clock	Clock	Clock	Clock
Control	Fixed	Fixed	Lever	Lever	Lever	Lever	Lever	Lever	Lever
§Impulse starter, complete	487445	487445	—	—	—	—	—	—	—
Ring, jump, 1" inside dia.	487393	487393	—	—	—	—	—	—	—
Springs, pair, with fibre strip	487387/S	487387/S	—	—	—	—	—	—	—
Plate, with impulse starter body	487443	487443	—	—	—	—	—	—	—
Nut, special, impulse starter fixing	487391	487391	—	—	—	—	—	—	—
Washer, spring, fixing nut	185085	185085	—	—	—	—	—	—	—
Ring, jump, fixing nut retaining	487390	487390	—	—	—	—	—	—	—
§ Lever, trip	487445	487455	—	—	—	—	—	—	—
Ring, jump, trip lever retaining	730799	730799	—	—	—	—	—	—	—
Cover, trip ring	487452	—	—	—	—	—	—	—	—
Coupling, vernier, rubber	451055	451055	—	—	—	—	—	—	—
Screw, with nut and washer, vernier body clamping	487532/S	487532/S	—	—	—	—	—	—	—
Stop, impulse starter cover	487415	487415	—	—	—	—	—	—	—
§Cover, contact breaker	452222	452222	453537	453537	453537	453537	453537	452222	453537
Brush and spring	454453	454453	454453	454453	454453	454453	454453	454453	454453
§Cam	458389	458389	457090	457090	457090	457090	457090	457090	457090
Screw, contact breaker fixing	122160	122160	122160	122160	122160	122160	122160	122160	122160
§Contact breaker, complete	470534	470534	470880	470880	470881	470881	470881	470533	470542
§ Springs, set, actuating	470688	470688	470599	470599	470599	470599	470599	470688	470688
Bush, insulating, contact screw block	470684	470684	470684	470684	470684	470684	470684	470684	470684
Bush, insulating, centre of contact breaker	470555	470555	470555	470555	470555	470555	470555	470555	470555
§ Brush and spring	470537	470537	470537	470537	470537	470537	470537	470537	470537
§ Contact set	470609	470609	470878	470878	470877	470877	470877	470608	470877
Spring and pin, distributor cover securing	452809	452809	—	—	—	—	—	—	—
§Condenser	487944	487944	487944	—	487944	487944	—	487944	487944
Gear, steel	487464	487464	487464	—	487464	487464	—	487464	487464
§Slip ring	464277	464277	464277	464277	464277	464277	464277	464277	464277
§Nut, shaft	—	—	170070	170070	170070	170070	170070	170070	170070
Washer, shaft	—	—	143059	143059	143059	143059	143059	143059	143059
§Bearing, contact breaker end and drive end	189294	189291	189294	189291	189294	189291	189291	189294	189294
§Cup, bearing insulating	463932	451379	463932	451379	463932	451379	451379	463932	463932
Bush, bearing, body	487488	487488	478488	487488	487488	487488	487488	487488	487488
Brush, spring and holder	460380	460380	460380	460380	460380	460380	460380	460380	460380
Brush and spring	451323	451323	451323	451323	451323	451323	451323	451323	451323
Pick-up, complete	487860	487860	487860	487860	487860	487860	487860	487860	487860
Brush and spring, vertical	487983	487983	487983	487983	487983	487983	487983	487983	487983
Brush and spring, horizontal	451260	451260	451260	451260	451260	451260	451260	451260	451260
Distributor cover, with cable screws	490203	490203	490203	490203	490203	490203	490203	490203	490203
Distributor arm	487943	487943	487943	487943	487943	487943	487943	487943	487943
Gear and sleeve assembly	487832	487832	487832	487832	487832	487832	487832	487832	487832

* See Supersession Chart § Recommended spares for stock

MAGNETOS—MODEL GJ4