

# DESCRIPTIVE INDEX



**EQUIPMENT SPECIFICATIONS.** For complete specifications of LUCAS equipment fitted to motor cycles, see pages A1 – A34.

**NUMERICAL INDEX.** For complete list of all part numbers, in numerical order, appearing in this catalogue, see pages B1 – B6.

	Page No.		Page No.
Alternators .. .. .	E13-15	LAMPS— <i>continued</i>	
Ammeters .. .. .	C1-3	<b>Stop tail and number plate</b> .. ..	H43-48
Auto-advance units .. .. .	G22	<b>Stop tail, number plate and reflex</b> .. ..	H43-48
Batteries and spares .. .. .	C4-9	<b>Reflex reflectors</b> .. .. .	H50
Fillers, battery .. .. .	C7	<b>Side or pilot</b> .. .. .	H40-42
Carriers, battery .. .. .	C7	<b>Sidecar</b> .. .. .	H40
Bulbs, lamp .. .. .	H53	Lens chart, side and rear .. ..	H51
Cables .. .. .	C10-11	<b>Magneto (flywheel) and generator</b>	
Cable wiring sundries .. .. .	C12-13	6F1 Model .. .. .	G41
Coils, ignition .. .. .	G8	<b>Magnetos</b> .. .. .	G9-23
Control boxes .. .. .	D1-2	K1FC, K1FR, KNC1 and KNRI	
Contact breaker units		Models .. .. .	G10-11
CA and 2CA Models .. .. .	G3	K2FC and K2FR Models .. ..	G10-11
Distributors .. .. .	G4-7	NC1 and NR1 Models .. ..	G10-11
Bearing chart .. .. .	G43	K1F, K2F, KVF and KN1L Models	G12-16
Bushing chart .. .. .	G43	N1, KN1 and KNV Models .. ..	G17-19
Gear chart .. .. .	G42	SR1, SR2, SRR1 and SRR2 Models	G20-21
Dyno-Distributor		<b>Magdynos</b> .. .. .	G24-40
E3KA Model .. .. .	G41	MO1 and MO1L Models .. ..	G25-31
Generators .. .. .	E1-15	MNIE Model .. .. .	G34-37
Bearing chart .. .. .	E2	MN2, MN2E, MN2L and MNV Models	G34-37
Bushing chart .. .. .	E2	MSL1S and MNR1 Models .. ..	G36-37
Brush chart .. .. .	E3	MSR1 and MSL1 Models .. ..	G38-39
Gear chart .. .. .	E3	MSLV, MSHV and MSRV Models ..	G38-39
Horns .. .. .	F1-6	<b>Regulators</b> .. .. .	D2
Brackets, horn .. .. .	F4	<b>Suppressors</b> .. .. .	G5
Horn pushes .. .. .	F5-6	<b>SWITCHES and KNOBS</b> .. .. .	J1-8
Horn pushes and dipper switches .. ..	F5-6	Cutout, magneto .. .. .	J2
LAMPS .. .. .	H1-53	Dipper .. .. .	J3
Driving .. .. .	H2-3	Fog and driving lamp .. .. .	H2
Fog .. .. .	H2-3	Ignition .. .. .	J8
Head .. .. .	H4-38	Lighting and ignition .. .. .	J7
Conversion sets, headlamp .. ..	H39	Lighting .. .. .	J4-5
Lens chart, headlamp .. .. .	H34	Panel .. .. .	J8
Tail and number plate .. .. .	H43-48	Stop lamp .. .. .	J6
Tank panel .. .. .	H49	Springs, stop lamp switch .. ..	J6
		<b>Warning lights</b> .. .. .	H49