

# LUCAS

SECTION

G

## IGNITION

### H.T. COILS, DISTRIBUTORS MAGDYNOS, MAGNETOS, SUPPRESSORS

#### CONTENTS

	<i>Description</i>	<i>Page</i>		<i>Description</i>	<i>Page</i>
<b>Coils</b>			<b>Magnetos</b>		
Detailed parts .. .. .		G8	Detailed parts		
Descriptive reference .. .. .		G8	Models K1FC, K2FC, K1FR, K2FR, KNC1, KNR1, NC1 and NR1 ..	G11	
Motor cycle application .. .. .		G8	Models K1F, K2F, KVF and KN1L	G13-16	
Supersession chart .. .. .		G45	Models NI, KN1 and KNV ..	G18-19	
			Models SR1, SR2, SRR1 and SRR2 ..	G21	
<b>Contact Breaker Units</b>			Model reference .. .. .	G9	
Detailed parts .. .. .		G3	Motor cycle application .. .. .	G23	
Model reference .. .. .		G2	Supersession chart .. .. .	G45	
Motor cycle application .. .. .		G3			
			<b>Magneto</b>		
<b>Distributors</b>			Auto-advance Units		
Detailed parts .. .. .		G6-7	Detailed parts .. .. .	G22	
Model reference .. .. .		G2	Motor cycle application .. .. .	G22	
Motor cycle application .. .. .		G5	Supersession chart .. .. .	G45	
Supersession chart .. .. .		G45			
			<b>Magneto and Generator—Flywheel</b>		
<b>Dyno-Distributor</b>			Detailed parts .. .. .	G41	
Detailed parts .. .. .		G41			
			<b>Miscellaneous Charts</b>		
<b>Magdynos</b>			Bearings .. .. .	G43	
Detailed parts			Bushings .. .. .	G43	
Models MO1 and MO1L .. .. .		G26-29	Brushes and springs .. .. .	G42	
Models MO1 (old types) .. .. .		G30-31	Gear sets .. .. .	G42	
Models MN1E, MN2E, MN2, MN2L and MNV .. .. .		G34-35			
Models MN1E, MSL1S, MN2E, MNV, MN2 and MNR1 (old types) .. .. .		G36-37	<b>Screwdrivers, Spanners and Point Gauges</b>	G44	
Models MSLV, MSHV, MSR1, MSRV and MSL1 (old types) .. .. .		G38-39			
Model reference .. .. .		G24	<b>Suppressors</b>		
Motor cycle application .. .. .		G40	Descriptive reference .. .. .	G5	
Supersession chart .. .. .		G45	Motor cycle application .. .. .	G5	