





# GEAR SETS, BRUSHES AND SPRINGS


## GEAR SETS FOR DISTRIBUTORS AND MAGDYNOS

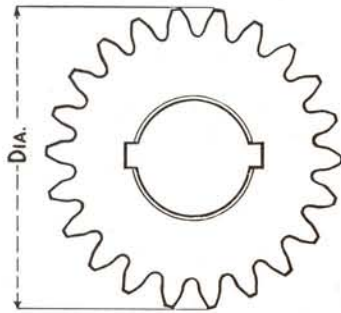

SPUR TYPE

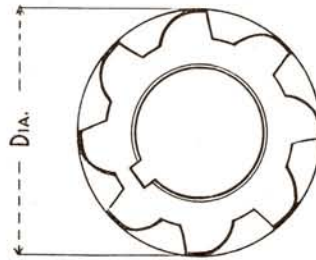


SPIRAL TYPE

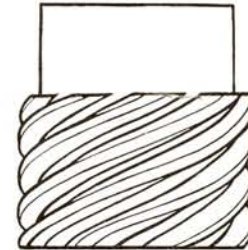

ELEVATION

Ordering No.	Fitted to	Remarks	Consisting of Gear No.	Outside Diameter	Number of Teeth	Type of Gear	Direction of Spiral
220498	Distributor DKX2 .. .. .	} Set	220433 (Distributor)	.972"	16	Spiral	R.H.
	Dynamo C35SD/0 .. .. .		220434 (Dynamo)	1.103"	8	Spiral	R.H.
220643	Distributor DKX4A .. .. .	} Set	220609 (Distributor)	.908"	12	Spiral	R.H.
	Dynamo C35SD .. .. .		220610 (Dynamo)	1.208"	5	Spiral	R.H.
461435	Magdyno MN2 .. .. .	} Magneto Gear	—	2.702"	50	Spur	—
462862	Magdyno MSL1, MSLV, MSR1 and MSRV		451385 (Dynamo)	1.385"	22	Spur	—
			462858 (Magneto)	3.440"	58	Spur	—
462863	Magdyno MN2L, MNR1, MNV, MSHV, MO1 and MO1L .. .. .	} Set	454495 (Dynamo)	1.385"	22	Spur	—
			463109 (Magneto)	3.442"	58	Spur	—
†463148	Magdyno MN2 .. .. .	} Set	454495 (Dynamo)	1.385"	22	Spur	—
			463109 (Magneto)	3.442"	58	Spur	—
463844	Magdyno MN2E .. .. .	} Generator Gear	—	2.142"	40	Spur	—
467569	Magdyno MN1E .. .. .		464269 (Dynamo)	2.142"	40	Spur	—
			464268 (Magneto)	2.702"	50	Spur	—

## BRUSHES AND SPRINGS

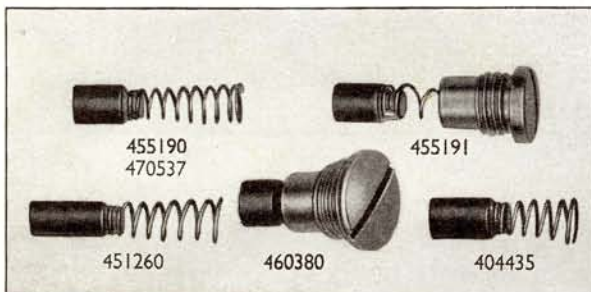

MAGDYNO

Ordering No.	Fitted to	Application
404435	MSL1S .. .. .	Pick-up
451260	All Models .. .. .	Pick-up
*451323	All Models .. .. .	Earth
455190	} MN2, MN2L, MNV, MO1 and MO1L	Earth
455191		Earth
460380		Earth
470537	All Models .. .. .	Earth
	MN1E, MN2, MN2E, MN2L, MNV, MSL1, MSLV, MSHV, MSR1 and MSRV .. .. .	Contact breaker

## DISTRIBUTOR

Ordering No.	Fitted to	Application
404435	D1A2, DKX4A, DKX2A and DKYH4A .. .. .	Pick-up
421863	18D2 .. .. .	Pick-up

## MAGNETO

Ordering No.	Fitted to	Application
404435	SR2, SR2 Mk. IIA and SRR2F .. .. .	Pick-up
451260	} K1F, K1FC, K1FR, K2F, K2FC, K2FR, KN1, KN1L, KNR1, KNV, KVF, N1, NCl and NR1 .. .. .	Pick-up
455190		Earth
455191		Earth

\* Part of assembly 460380

† Special assembly for Douglas